



## COTTON CANDY MACHINE

### OPERATING INSTRUCTIONS

1. Fill the floss head 90% full with sugar. **DO NOT OVERFILL!!**
2. Spin the head to balance out sugar.
3. Turn MAIN SWITCH and HEAT SWITCH "ON".
4. **NEVER ADD SUGAR WHEN MOTOR IS RUNNING.**
5. Turn heat control knob clockwise to maximum setting to initiate fastest warm-up.
6. The machine should start making floss in a few seconds. When the unit reaches proper heat, it may start to smoke. Turn the heat control knob counter clockwise to eliminate smoking.
7. Once you find the ideal setting for the HEAT CONTROL, operate the setting near this position.
8. When you are all finished, **PLEASE CLEAN THE TOP BOWL WITH HOT WATER TO REMOVE ALL THE SUGAR. DO NOT PUT WATER INTO THE BASE OF THE MACHINE**

**THERE WILL BE A \$25.00 CLEANING FEE FOR ALL MACHINES RETURNED UNCLEANED**

**[www.bouncearoundrentals.com](http://www.bouncearoundrentals.com)**  
**330-726-5781**