

COTTON CANDY MACHINE

OPERATING INSTRUCTIONS

1. Fill the floss head 90% full with sugar. **DO NOT OVERFILL!!**
2. Spin the head to balance out sugar.
3. **NEVER ADD SUGAR WHEN MOTOR IS RUNNING.**
4. Turn MAIN SWITCH and HEAT SWITCH "ON".
5. Turn heat control knob clockwise to maximum setting to initiate fastest warm-up.
6. The machine should start making floss in a few seconds. When the unit reaches proper heat, it may start to smoke. Turn the heat control knob counter clockwise to eliminate smoking.
7. Once you find the ideal setting for the HEAT CONTROL, operate the setting near this position.
8. When you are all finished:
 - **PLEASE CLEAN THE ALUMINUM PAN, NETTING AND PLASTIC SHIELD WITH HOT SOAPY WATER TO REMOVE ALL THE SUGAR.**
 - **WIPE STAINLESS STEEL BASE WITH DAMP TOWEL ONLY!**
 - **DO NOT GET WATER IN SPINNING HEAD OF COTTON CANDY MACHINE!**

**THERE WILL BE A \$25.00 CLEANING FEE FOR ALL MACHINES
RETURNED UNCLEARED**