



PUCKER POWDER MACHINE

OPERATING INSTRUCTIONS

Your Pucker Powder rental machine will come with 5 flavors, and 30 filling tubes with caps.

The 5 flavors are:

- Sour Fruit Punch
- Sweet Birthday Cake
- Sour Green Apple
- Sour Grape
- Sweet Strawberry

(Substitutions are not available)

Place a tube in the slot of which Pucker Powder candy you would like and press the *gray* button on top. Mix and match if you would like!

*Be careful not to overflow the tubes.

For best use have the child pour the candy out of the tube into their hand, instead of placing the tube up to their mouth.

When your rental is done, take a cup(s) and place it under each flavor and press the *gray* button on top to empty the rest of the Pucker Powder candy for future use.

- KEEP PUCKER POWDER MACHINE ON A FLAT AND LEVEL SURFACE.**
- \$25.00 CLEANING FEE WILL BE CHARGED FOR MACHINES RETURNED UNCLEARED.**

www.bouncearoundrentals.com

330-726-5781